
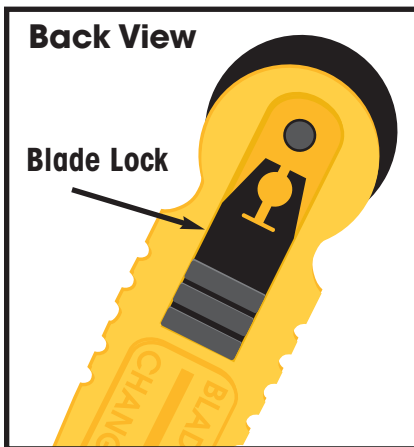


# 18mm ROTARY CUTTER ASSEMBLY (RTY-4)

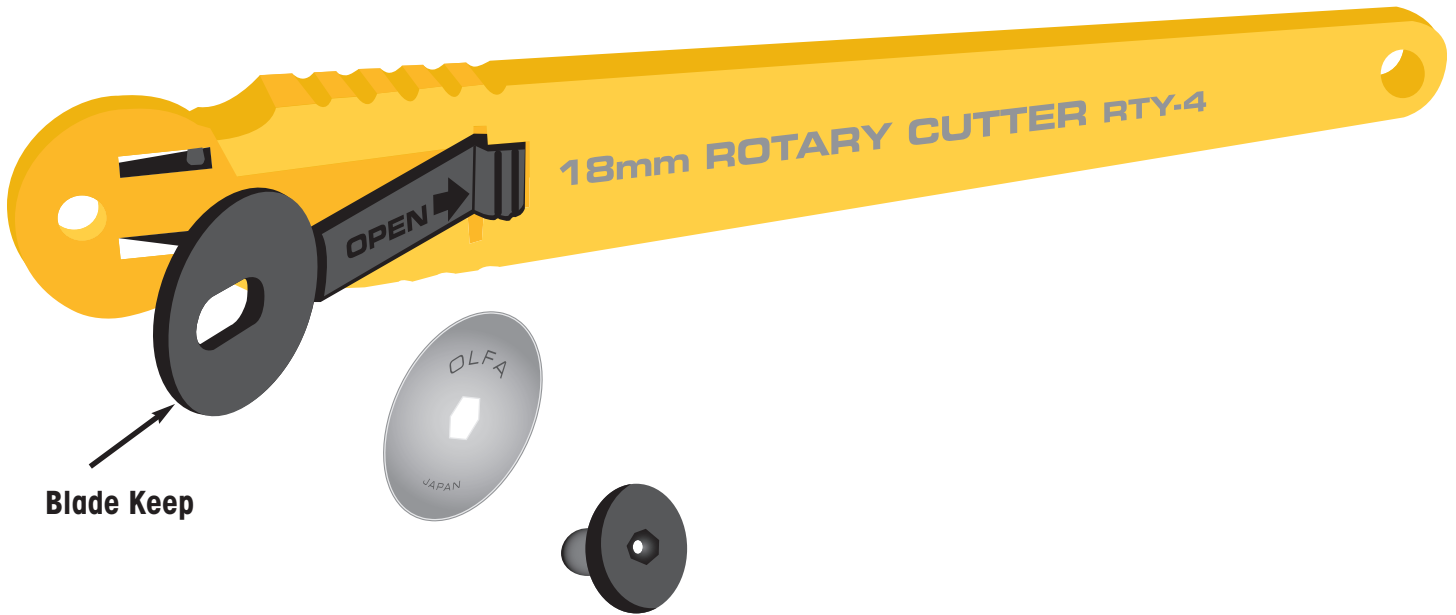

To Change Blade: (Reverse side shown)

1. To remove blade, turn cutter with front side down approximately 2 inches above a flat surface. Slide the blade lock down.
2. CAREFULLY replace blade then lock. Make sure the Blade Keep is closed.
3. Dispose of old blade using the package that the new blade came in; tape it securely together and dispose.

**OLFA**<sup>®</sup>  
Best made cutting tools in the world.<sup>®</sup>

[www.olfacom](http://www.olfacom)